

## Peel & Stick Sealing System



# ChromoSeal™ Peel & Stick Sealing System

## System Description

ChromoSeal™ Peel & Stick Sealing System offers a convenient, easy-to-apply waterproofing solution for bathrooms and wet rooms indoors. It requires no additional adhesive for installation. Thanks to the butyl coating on the back of the film, the components can be easily applied to the surface by peeling off the release film. The fleece-coated front allows tiling to begin immediately after waterproofing is complete.

### Product Benefits:


- Approved composite waterproofing system
- Available in kits and individual accessories
- No need for extra adhesives on the underside
- No drying time required
- Simple and fast installation
- Complete system with all essential sealing elements
- Ready for tiling right after installation
- Easy tile placement due to the thin overlap area

### Product Features:

- Polypropylene fleece
- Polyethylene or polypropylene membrane
- Self-adhesive butyl rubber
- Waterproof composite construction

### Why Choose the Peel & Stick System?





ChromoSeal™ Peel & Stick Sealing System is ideal for bathroom sealing because of its straightforward and quick installation process. Its user-friendly application ensures a hassle-free waterproofing of the intended areas.

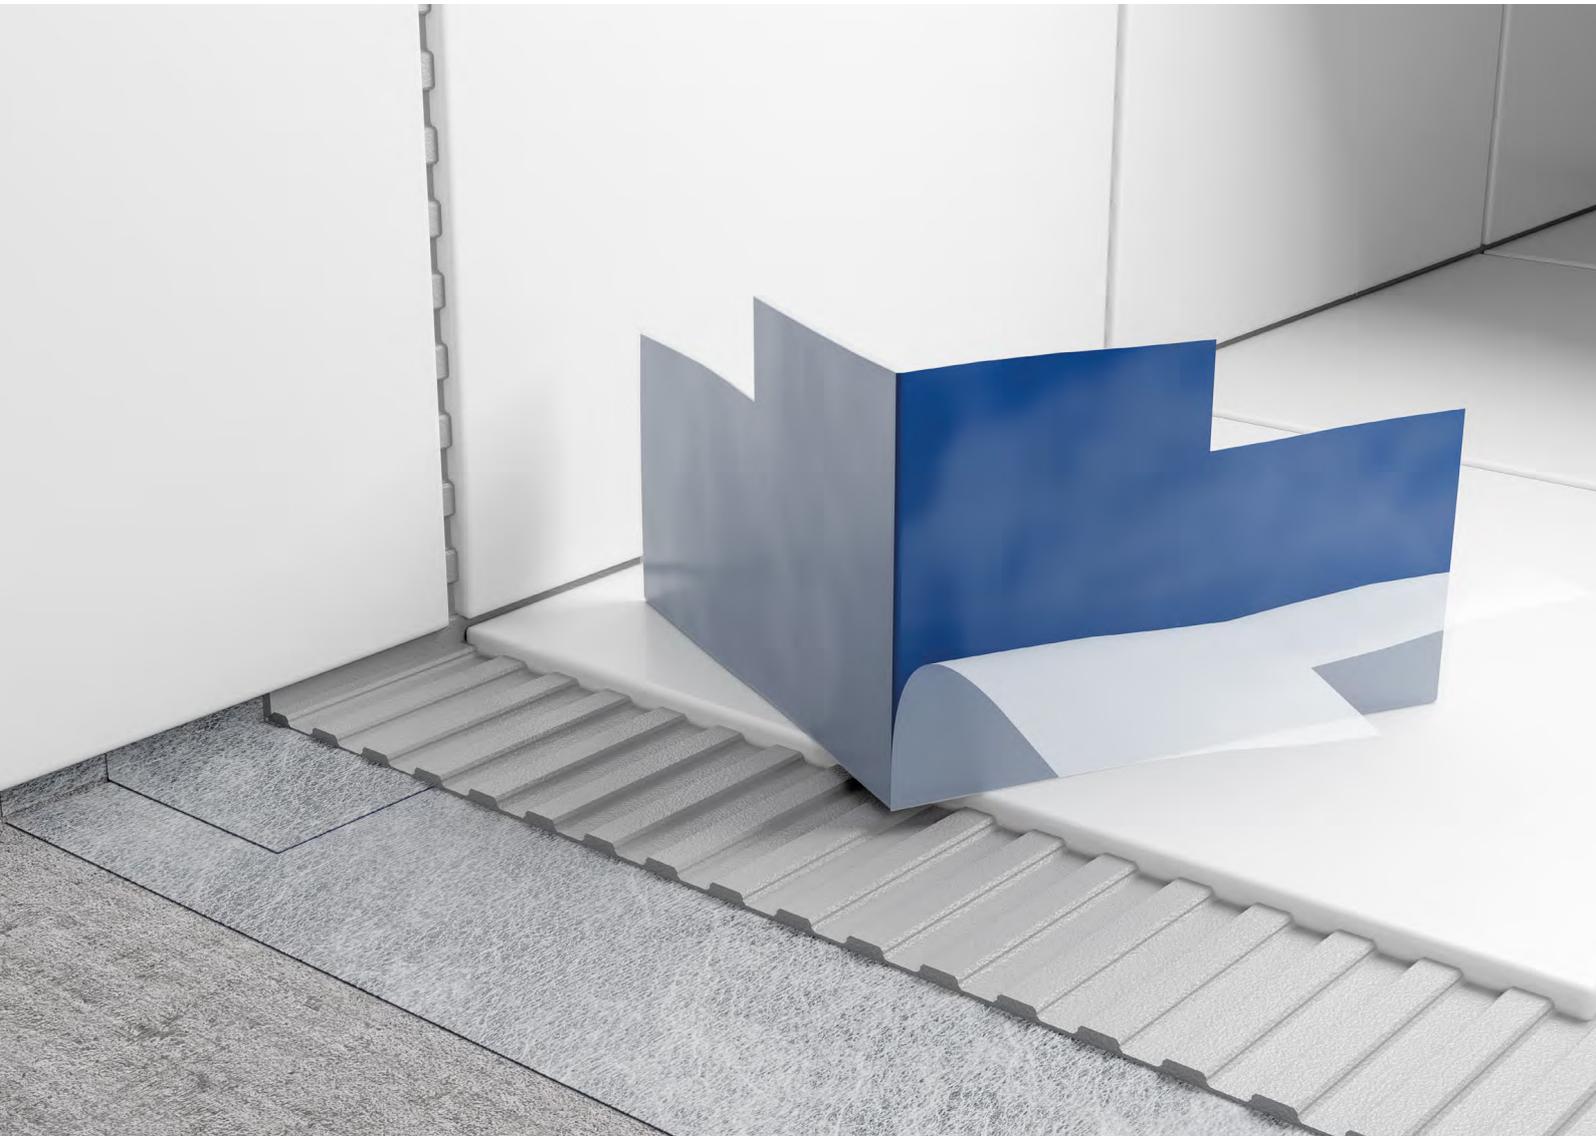

# The Self-Adhesive Sealing System



## The System Components

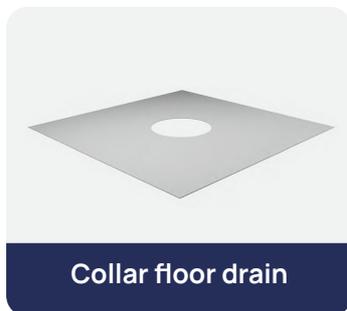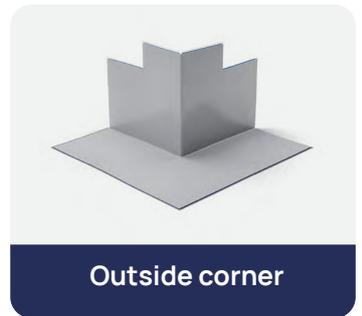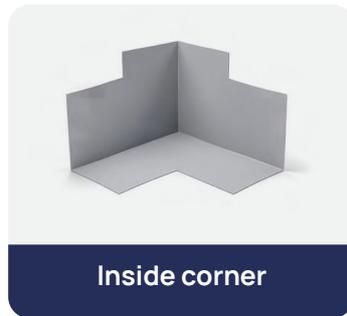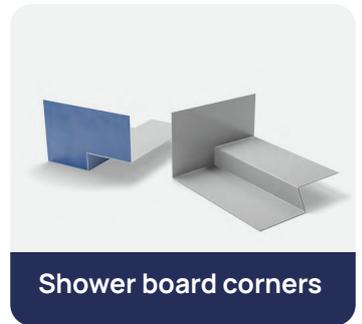


# Application

Prior to installing the membranes and system components, ensure the substrate is properly prepared and free from dust, oil, and any other substances that may hinder adhesion. The surface should be level and smooth, and ideally, treated with an appropriate primer.



Begin by installing the accessories of the waterproofing system, including corners, flexible collars, tape, or upstand tape.

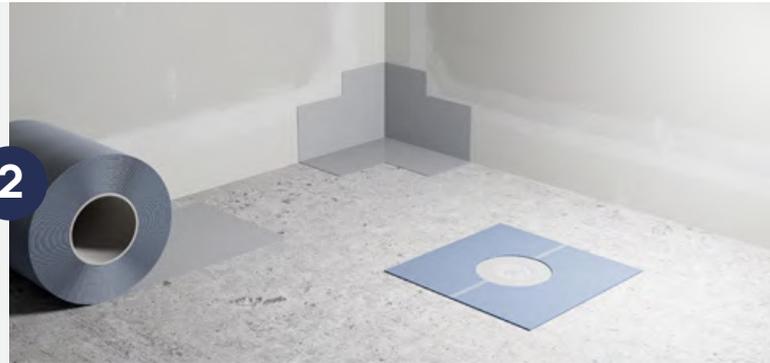


Peel off the release film and firmly press the entire surface using a pressure roller.



In accordance with DIN 18534, the waterproofing membrane should overlap the system components by at least 5 cm. When installing the sheets and accessories, ensure they are placed without any folds or air bubbles.



Tiling can begin immediately, as no drying time is required.

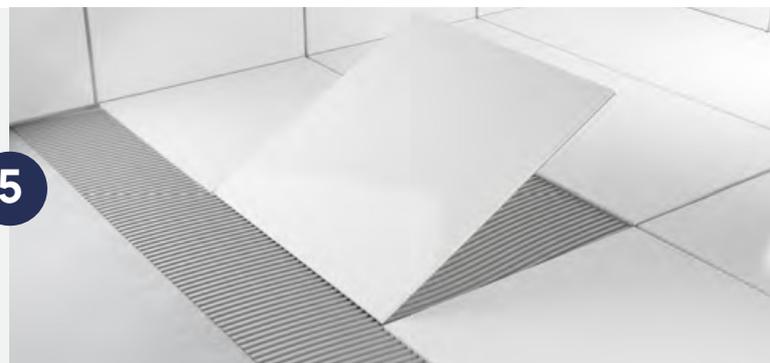

## **Quality Assurance and Responsibility**

Chromo Building Solutions products adhere to rigorous standards certified by an independently verified management system, ensuring compliance with our quality, environmental, and occupational health and safety standards, as outlined in Chromo Building Solutions ESHQ recommendations.

Properties listed are based on laboratory controlled tests.

® = Registered trademark of the Chromo Building Solutions.

## **Statement of Responsibility**

The technical information and application advice provided in this Chromo Building Solutions publication are based on our best scientific and practical knowledge. However, given its general nature, we do not assume responsibility for specific product suitability or warranty beyond legal requirements. Users must verify product suitability for their intended use.

## **Disclaimer**

This technical data sheet offers general application guidance, considering the diverse site conditions and application fields of our products. While based on our knowledge and experience, customers are required to conduct thorough testing for suitability. Any use beyond stated fields of application, without prior consultation with Chromo Building Solutions, and resulting damages, are the sole responsibility of the customer.

Please note that all information provided herein is subject to change without notice and does not constitute contractual stipulations. Recipients are responsible for observing possible proprietary rights and existing laws. The reference to trade names of other companies does not imply recommendation. Our information describes product quality and services but does not constitute a warranty. Liability for any incomplete or incorrect particulars in our data sheets is accepted only in cases of intent or gross negligence, without prejudice to claims under product liability laws.

# Peel & Stick Sealing System



**Chromo Building Solutions**

E | [info@echromo.com](mailto:info@echromo.com)

A | BIW (Bahrain Investment Wharf), Hidd 115, Bahrain

[www.echromo.com](http://www.echromo.com)

